

Double DRAGON

3 P

PARTS SIDE

GND	1
	2
GND	3
	4
1P PUSH 3	5
1P PUSH 2	6
1P PUSH 1	7
1P RIGHT	8
1P LEFT	9
1P DOWN	10
1P UP	11
1P START	12
	13
COIN 1	14
	15
GND	15
BLUE	16
RED	17
	18
SPEAKER (+)	19
	20
COUNT 1	21
	22
+ 1.2 V	23
- 5 V	
+ 5 V	25
+ 5 V	26
GND	27
GND	28

SOLDER SIDE

1	GND
2	GND
3	
4	
5	2P PUSH 3
6	2P PUSH 2
7	2P PUSH 1
8	2P RIGHT
9	2P LEFT
10	2P DOWN
11	2P UP
12	2P START
13	COIN 2
14	
15	SERVICE
16	SYN C.
17	GREEN
18	
19	SPEAKER (-)
20	
21	COUNT 2
22	
23	+ 1.2 V
	- 5 V ₁
25	+ 5 V
26	+ 5 V
27	GND
28	GND



TV ORIZZONTALE

2 LEVE 8 POSIZIONI
6 PULSANTI